

Vodavi STSe

Attendant Setting Time and Date

System Time/Date must be set by using feature code 692.

To set using the feature code:

1. Dial [692] on the dial pad. A confirmation tone will sound.
2. Enter date and time as follows: YYMMDDHHMM
YY=Year (00-99), MM=Month(01-12), DD=Day(01-31), HH=Hour(00-23),
MM=Minute(00-59)

When the correct number of digits are entered, a confirmation tone will sound.

3. Press the ON/OFF button to OFF to update the display.

Security Services

***Certified
Alarm
Co.***

of Ala Inc

(256)383-1225

**ABES-066
TN C0550**