

Setting the Clock

To set the Clock, for Daylight Saving Time Changes

- Press the **Speaker** button (**from Administrators Phone only**)
- Dial **728 + Time**, (4-Digits in 24hr. format
0830=8:30 AM, 1645=4:45PM)
- Press the **Speaker** button to quit.

*Telecom
&
Security Services*

***Certified
Alarm
Co.***

of Ala Inc
(256)383-1225

**ABES-066
TN C0550**