


# DESI

## NEC Telephone label printing software Tutorial


1. Download the software from the CD or [www.desi.com](http://www.desi.com)




2. Click on the “desi-lite-installer” icon to install
3. Follow the setup unstructions to install, then click on the desktop icon to run

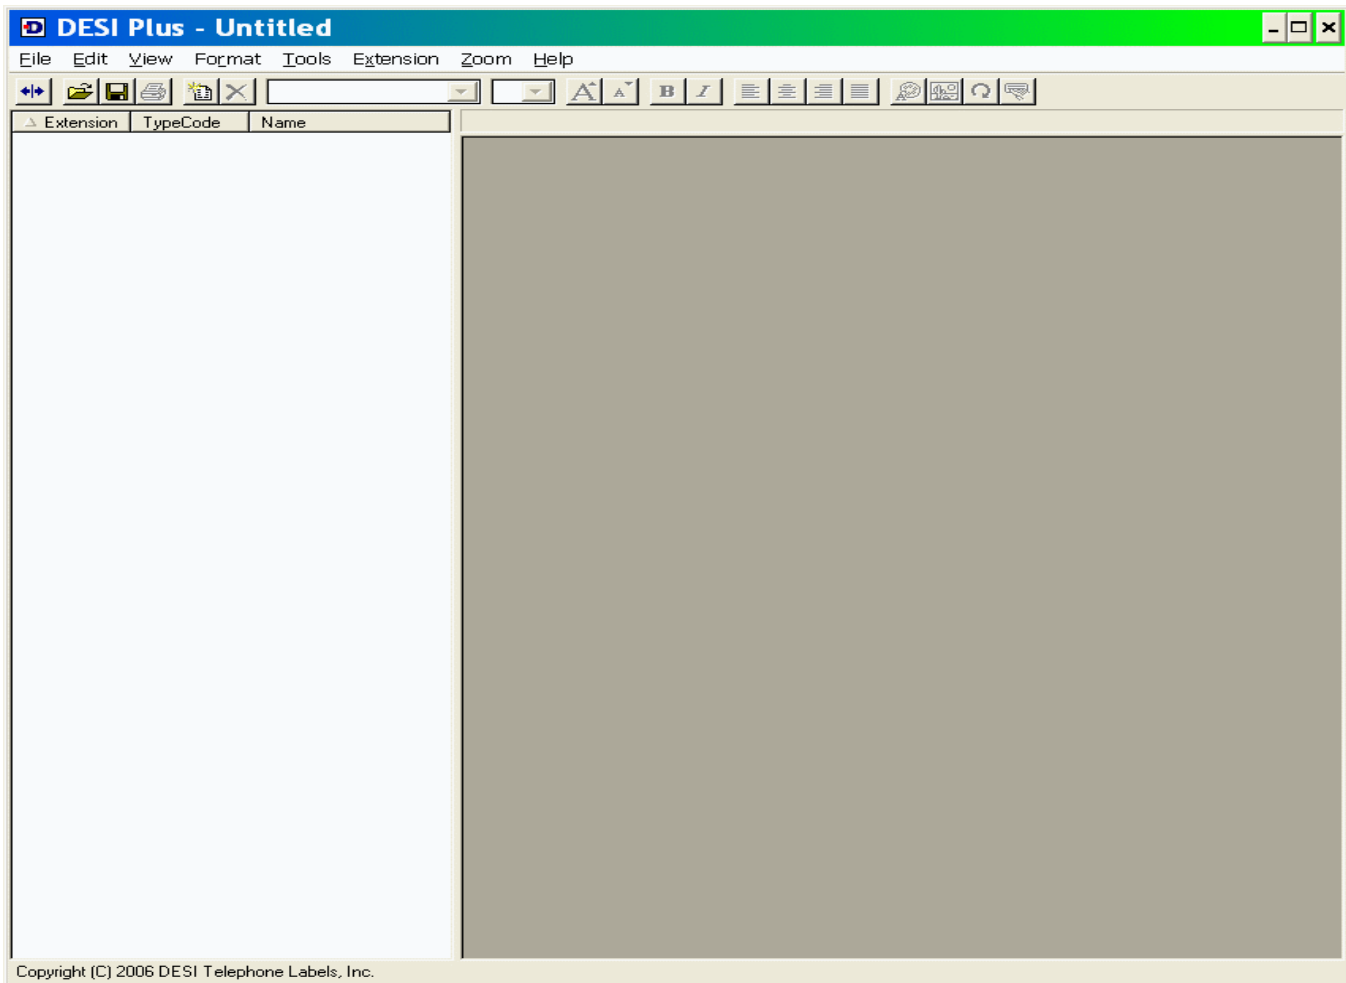


4. Click on “Extension” above the toolbar, then click “New Extension”

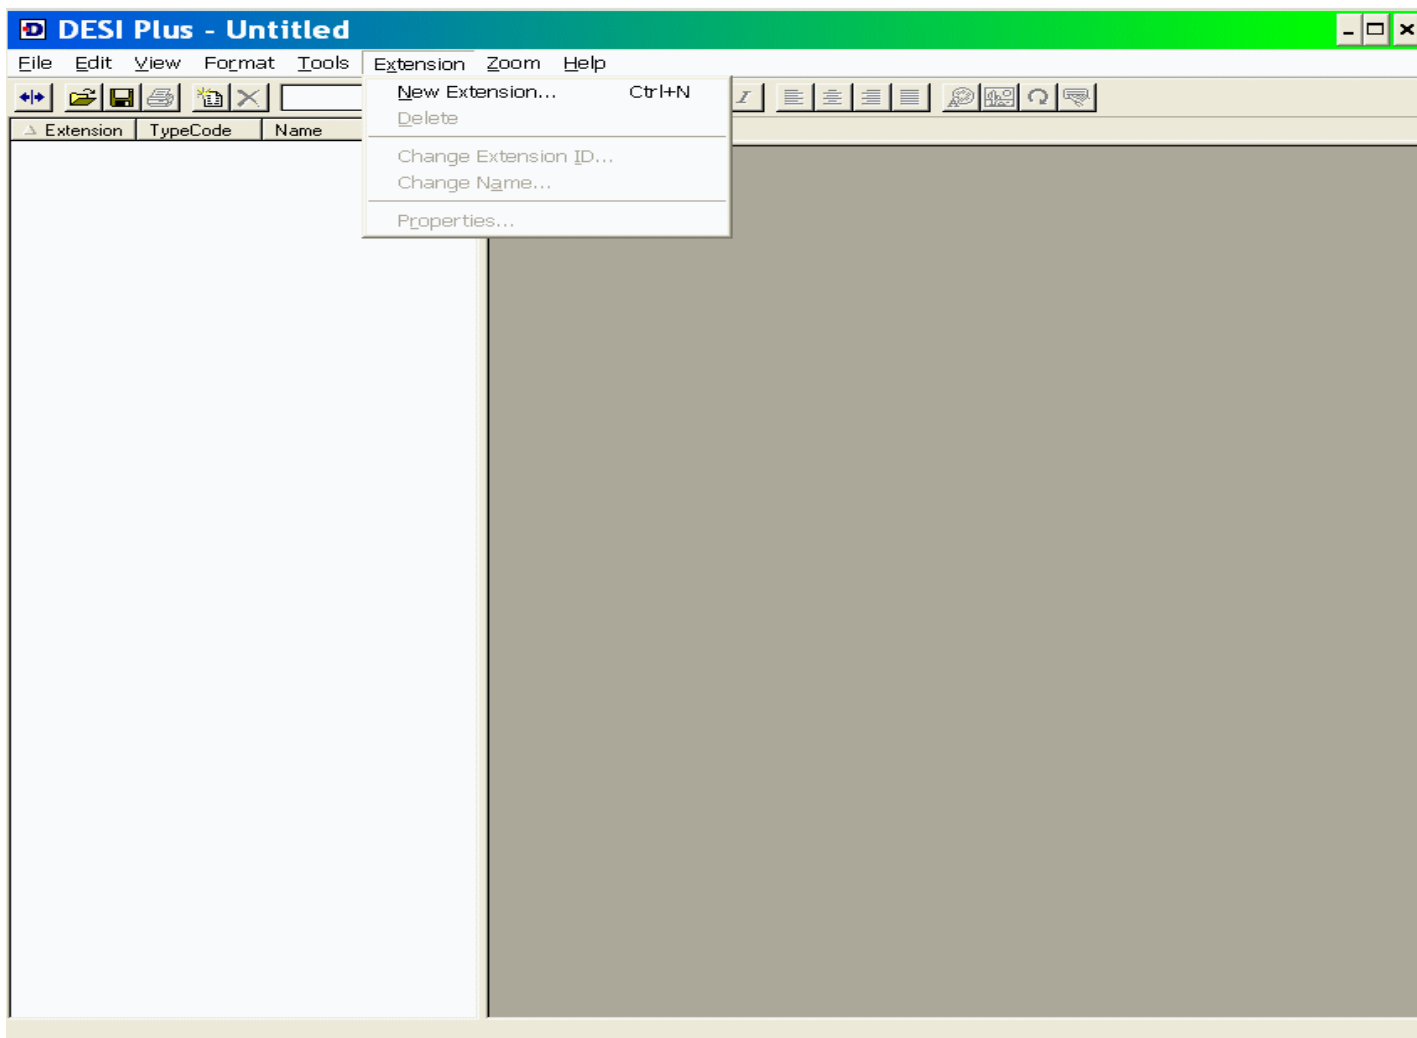

5. Type the ext # you are labeling in the “Extension(s) to Add” box
6. In the “Product Family” box select “NEC Dterm Series i”

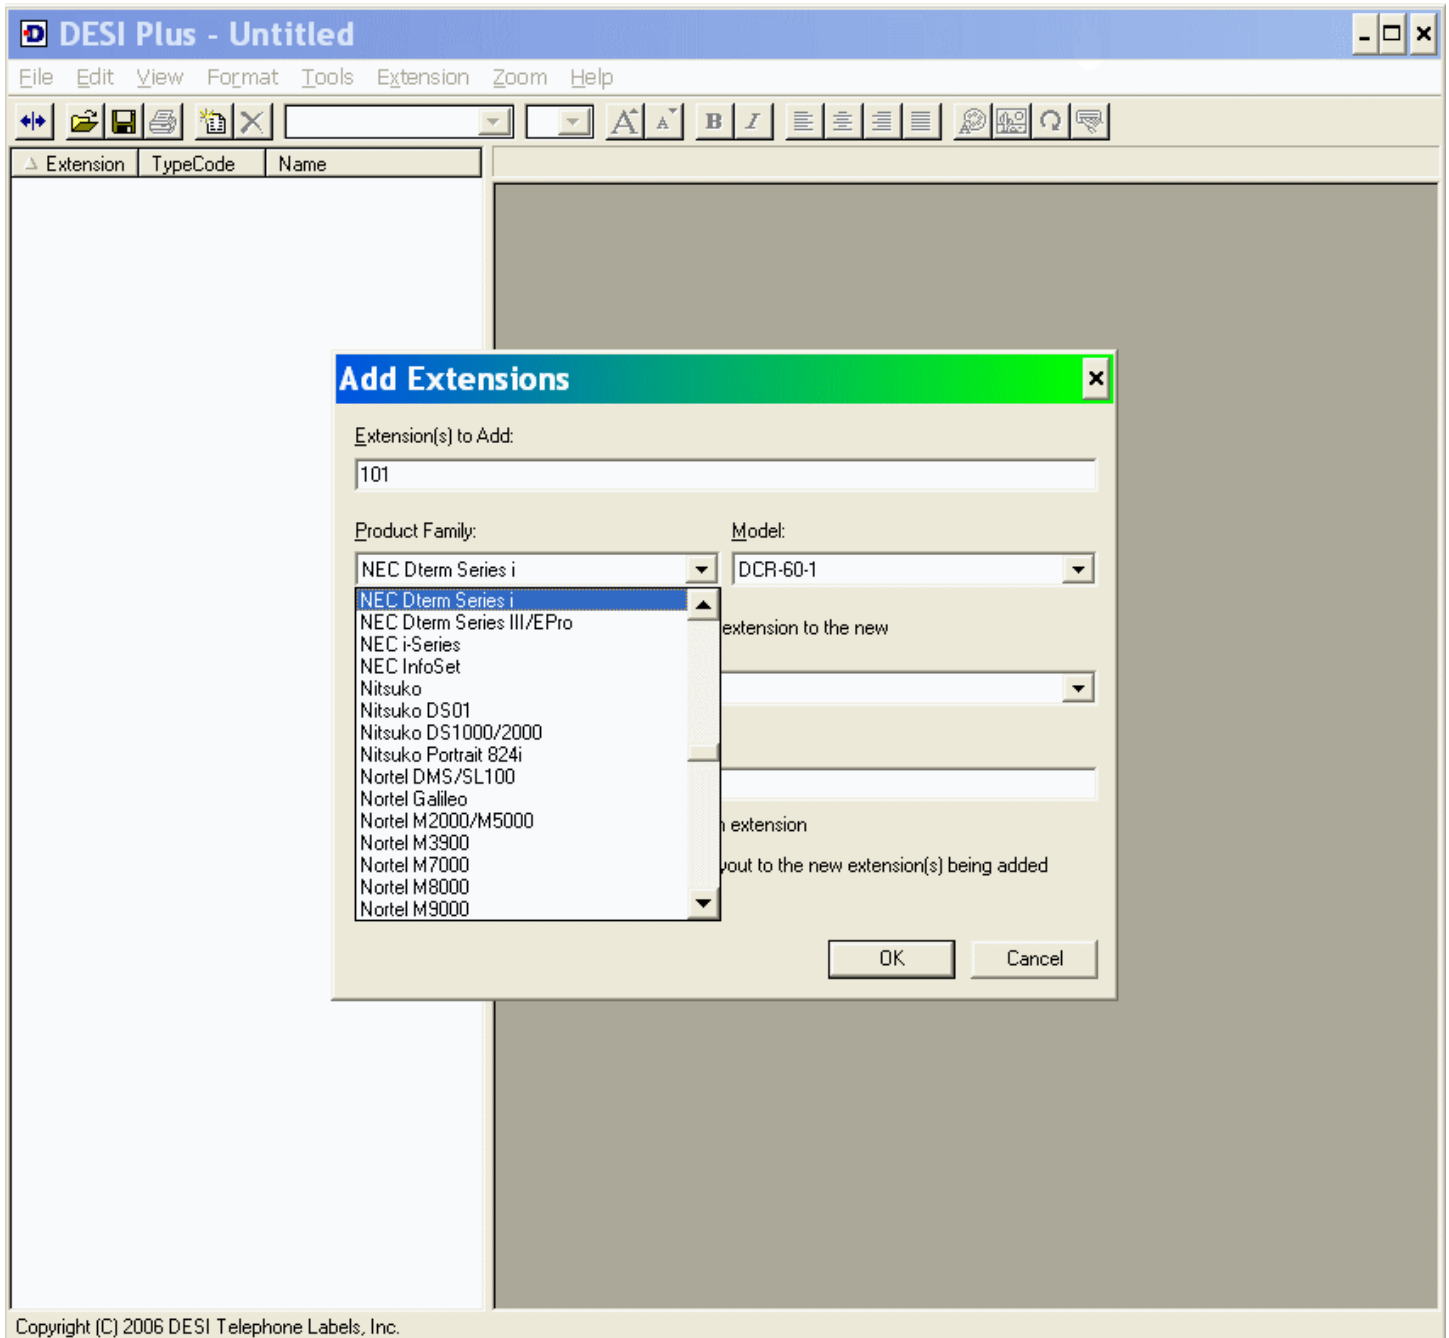

7. In the Model box select “ DT(X)-16D-1 for the 16 button Phone or DT(X)-32D-1 for the 32 button phone

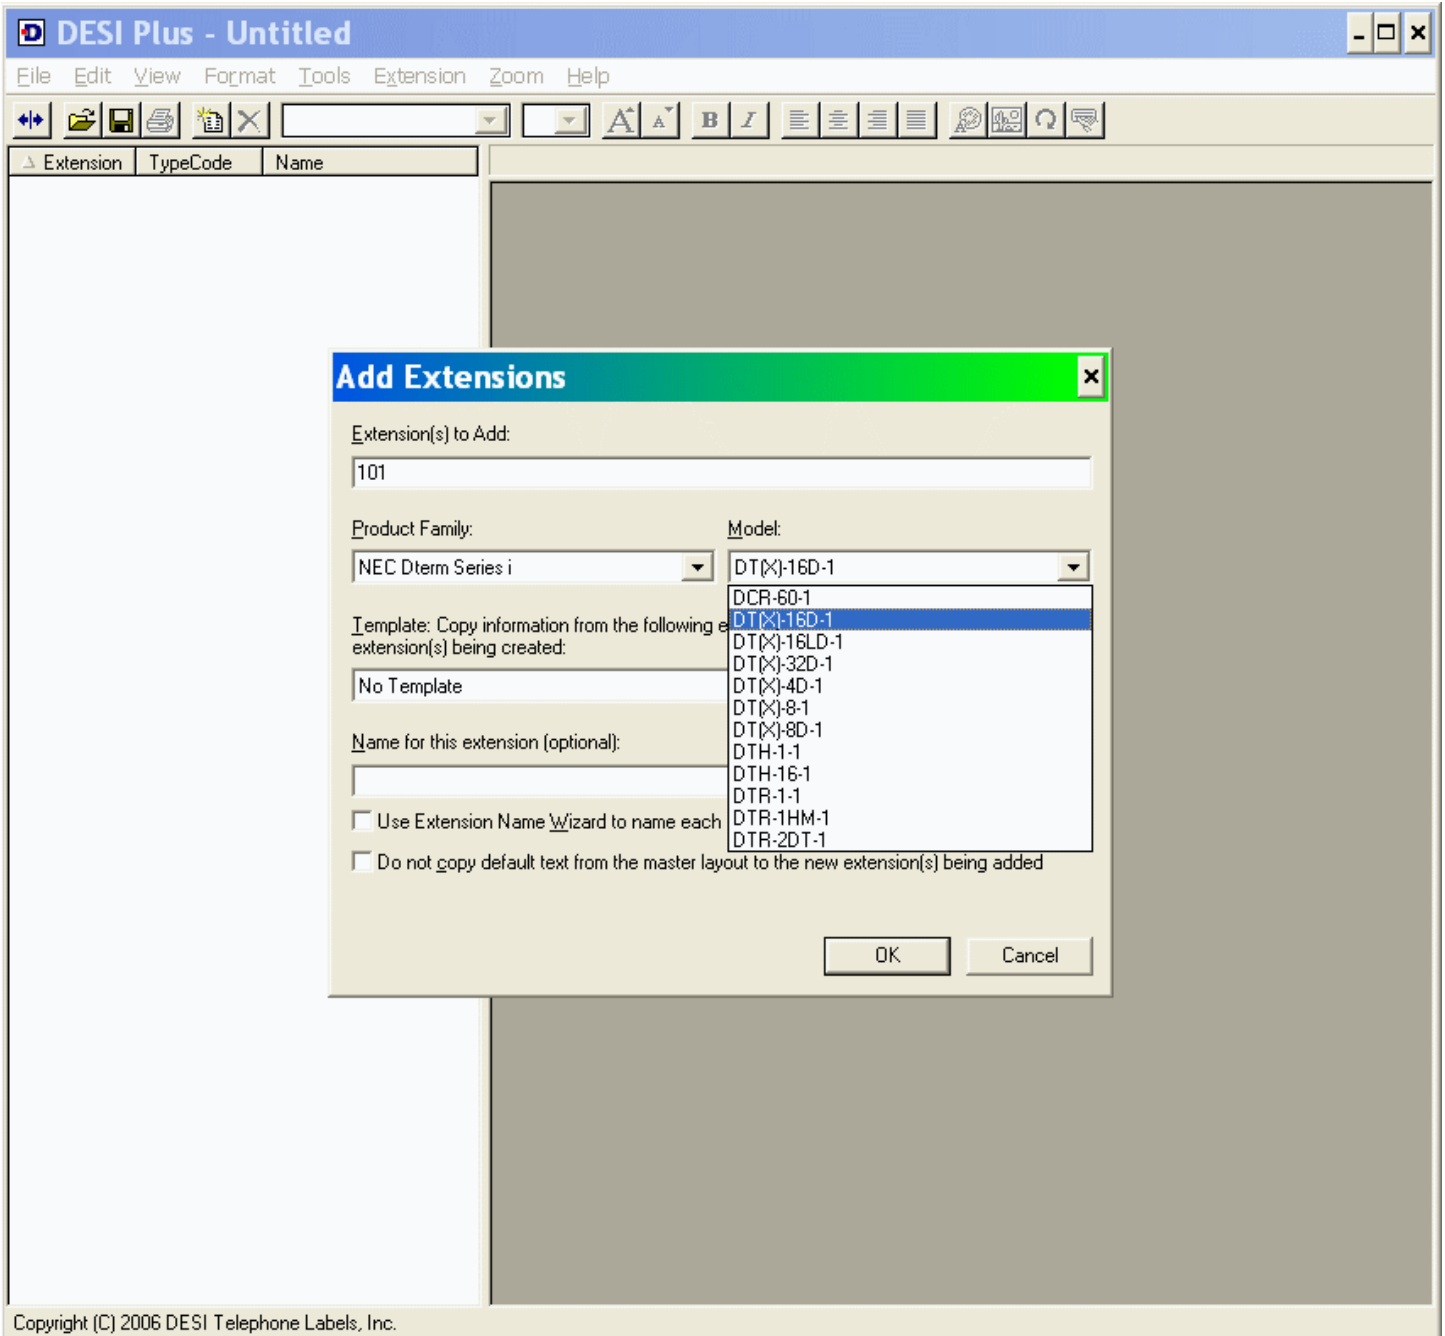


8. Select the button to label and type the information , (The font, size, and color can be changed)
9. Fill out all the buttons.
10. Select Extension (step #5) and add all other extensions that you need to label.

The screenshot shows the DESI Plus software interface. The title bar reads "DESI Plus - Untitled". The menu bar includes "File", "Edit", "View", "Format", "Tools", "Extension", "Zoom", and "Help". The toolbar contains various icons for navigation and editing. On the left, a table lists extension information:

Extension	TypeCode	Name
101	DTX-16D1	

The main window displays "Extension '101' (DT[X]-16D-1)". It features a "Comments:" field at the top. Below this is a keypad with buttons for "Exit", "Help", "Directory", and "Message", along with numerous unlabeled buttons and text input fields. A "Text Editor" dialog box is open, showing the text "Jerry" and "OK" and "Cancel" buttons. At the bottom left, a status bar indicates "1 extension in database".

11. When all labels are added, select the first label and click on the print button.
12. Follow the instruction and print each label (print on a blank page first to see how the DESI Labels should be loaded in your printer)

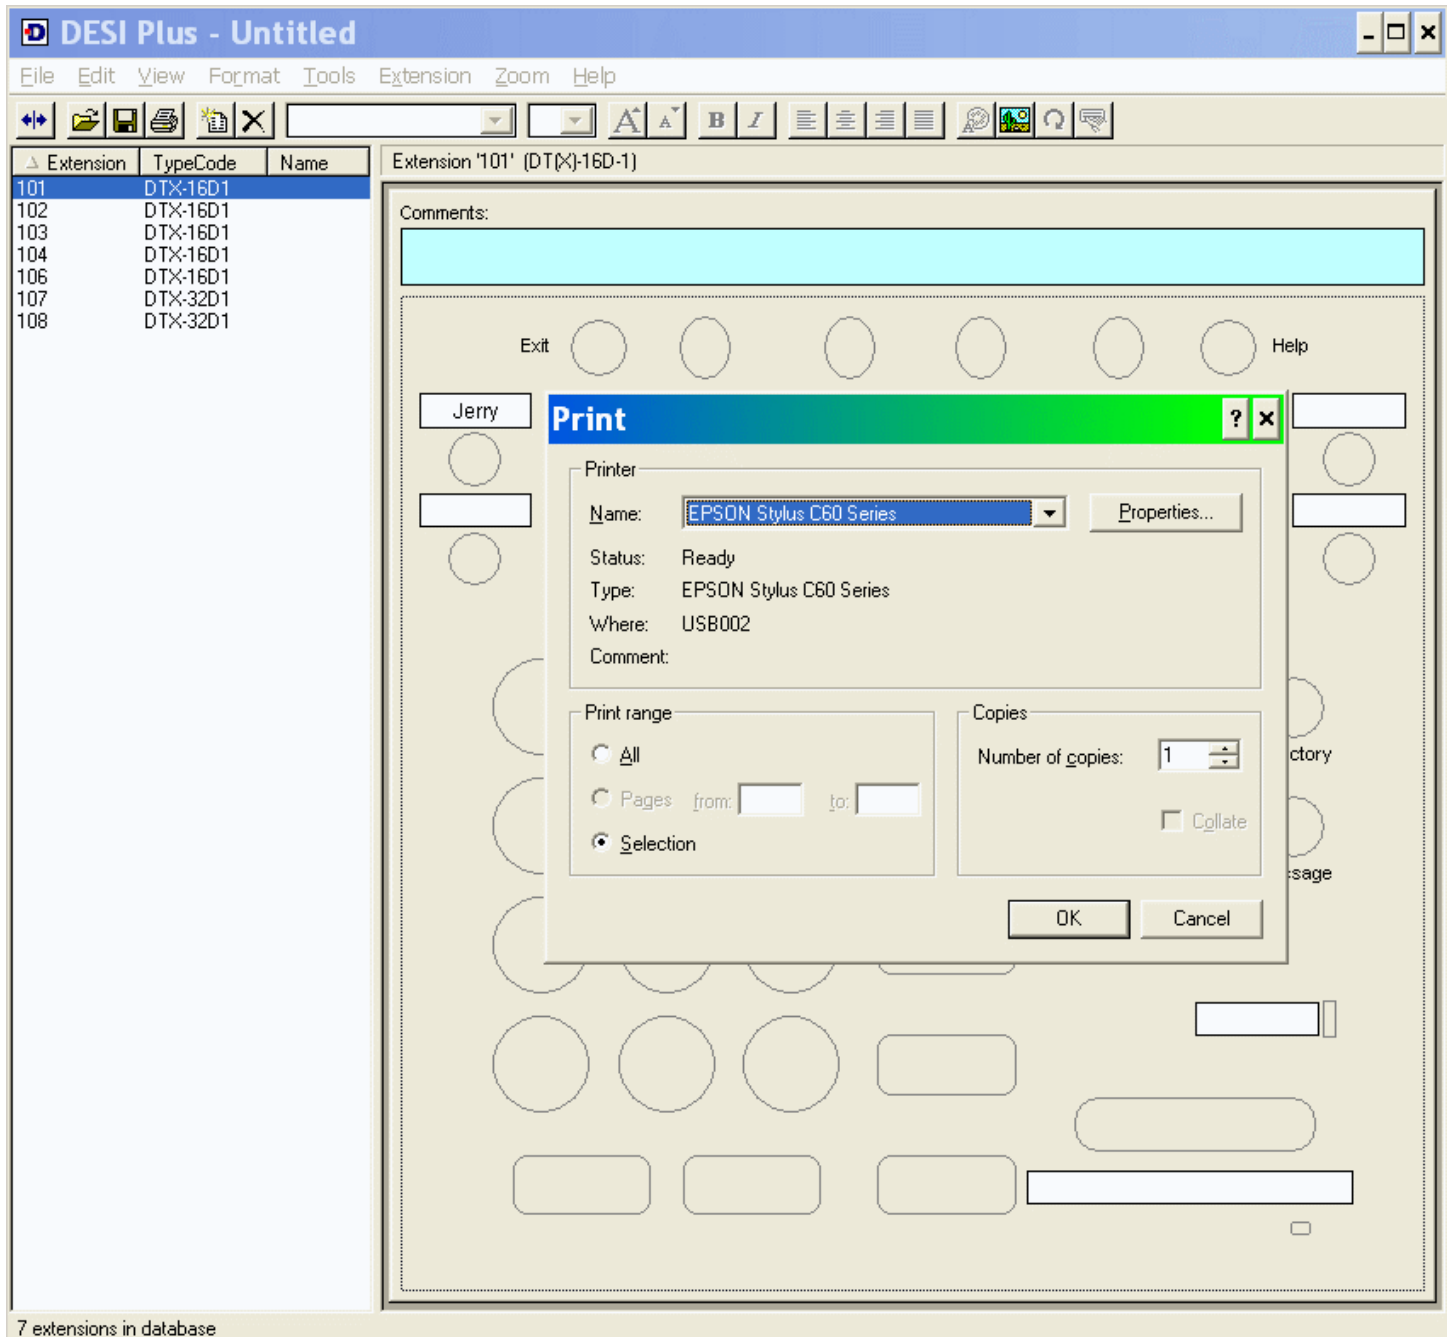

Labels can be purchased from Certified Alarm, they cost about \$1.00 per label.